

AMCX.S2576 - Central-station Alarm Units

Central-station Alarm Units

S2576

Napco Security Technologies Inc
 333 BAYVIEW AVE
 AMITYVILLE, NY 11701 United States

Investigated to UL 1610 3rd Ed. Revised: 2015-03-20

Accessory: End of line resistor Model(s) EOL10K

Computer converters, for use with CU GEMP9600 for supplementary use only Model(s) GEM-RS232

CU accessory: battery diode harnesses Model(s) BDH (*1)

CU accessory: keypads Model(s) CC-RP2AS (CCRP2AS), CC-RP3DGTL

CU accessory: keypads Model(s) CC5502LCD (*1), CF5500LCD (*1), RP3000LCD (*1), CF3000LCD (*1)

CU accessory: keypads Model(s) GEM-RP1CAe2(XXX), GEM-DRP1CA(XXX), GEM-K1CA(XXX), GEM-DK1CA(XXX), GEM-DK1CAS(XXX), GEM-RP2ASe2(XXX), GEM-K2AS(XXX), CC-K1CA(XXX), CC-K2AS(XXX)

CU accessory: keypads Model(s) RP3000LCDe (*2), CF3000LCDe (*2)

CU accessory: keypads, for use with CU GEMINI Model(s) GEM-RP3DGTL, GEM-K3DGTL, GEM-DRP3DGTL, GEM-DK3DGTL, GEM-DK3DGTLS

CU accessory: printer cable assemblies Model(s) PCBL (*1)

CU accessory: programmable output modules Model(s) GEM-OUT8

CU accessory: relay modules Model(s) RM3008 (*1)

CU accessory: transformers with housings Model(s) TRF15 (*2)

CU accessory: zone expanders Model(s) GEM-EZM4 (*1), GEM-EZM8 (*1)

CU subassembly: housings Model(s) TH1 (*2)

CU subassembly: power supplies Model(s) PS3000 (*2)

Subassembly "Starlink" Model(s) SLE-WiFi-Module (*3)

Subassembly Model(s) SLE-ULPS-R power supply module

Investigated to UL 1610 3rd Ed. Revised: 2015-03-20

Line Security Specifications

Model No.	Product	Notes	Line Security	Remote Connection	Conditions and Notes
Investigated to UL 1610 3rd Ed. Revised: 2015-03-20					

SLE-LTEV-CB-C, SLE-LTEV-CBTF-C, SLE-LTEV-C, SLE-LTEV-Z (*4)	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
Investigated to UL 1610 4th Ed. Issued: 2016-07-05					
SLE-MAXA	Communicator	-	Standard	-	-
SLE-MAXA-C	Communicator	-	Standard	-	-
SLE-MAXA-CB	Communicator	-	Standard	-	-
SLE-MAXA-CB-TF	Communicator	-	Standard	-	-
SLE-MAXA-CBTF-C	Communicator	-	Standard	-	-
SLE-MAXA-Z	Communicator	-	Standard	-	-
SLE-MAXAI-CFB	Communicator	-	Standard	-	-
SLE-MAXAI-CFBPS	Communicator	-	Standard	-	-
SLE-MAXAI-FIRE	Communicator	-	Standard	-	-
SLE-MAXV	Communicator	-	Standard	-	-
SLE-MAXV-C	Communicator	-	Standard	-	-
SLE-MAXV-CB	Communicator	-	Standard	-	-
SLE-MAXV-CB-TF	Communicator	-	Standard	-	-
SLE-MAXV-CBTF-C	Communicator	-	Standard	-	-
SLE-MAXV-Z	Communicator	-	Standard	-	-
SLE-MAXVI-CFB	Communicator	-	Standard	-	-
SLE-MAXVI-CFBPS	Communicator	-	Standard	-	-

SLE-MAXVI-FIRE	Communicator	-	Standard	-	-
SLE-FNI-CFB (a), SLE-LTEVI-CFB (a)	Communicator/ /Radio	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-FNI-FIRE (a), SLE-LTEV-FIRE (a)	Communicator/ /Radio	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEA	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE-LTEA-8D	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEA-CB	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEA-CB-TF	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE-LTEA-CFB	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEA-CFB-PS	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEA-FIRE	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE-LTEAI-CFB	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEAI-CFBPS	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEAI-FIRE	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE-LTEV	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEV-8D	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEV-CB	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE-LTEV-CB-TF	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEV-CFB	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-LTEV-CFB-PS	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE-LTEVI-FIRE	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE3/4GI-CFB-PS, SLE3/4GI-CB-TF, SLE3/4GI-CFB, SLE3/4GI-CB, SLECDMAI-CFB-PS, SLECDMAI-CB-TF, SLECDMAI-CFB, SLECDMAI-CB, SLE-GSMI-3/4G, SLE-CDMAI, SLE-GSMI-FIRE, SLE-CDMAI-FIRE Model numbers may be followed by an alpha/numeric suffix for marketing purposes (*3)	Communicator	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
SLE-FNI-CFB-PS (a), SLE-LTEVI-CFBPS (a)	Communicator/Radio	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions

SLE3/4G-CB, SLE3/4G-CB-TF, SLE3/4G-CFB, SLE3/4G-CFB-PS, SLE-CDMA, SLE-CDMA-8D, SLE-CDMA-FIRE, SLE-GSM-3/4G, SLE-GSM-8D-3/4G, SLE-GSM-FIRE, SLECDMA-CB, SLECDMA-CB-TF, SLECDMA-CFB, SLECDMA-CFB-PS	Communicators	-	Standard	-	For use with compatible Listed control units and central station receivers as indicated in the installation instructions
--	---------------	---	----------	---	--

(*1) - Complementary Listed to AOTX, APAW, NBSX, NBSX7, UTOU, UTOU7.

(*2) - Complementary Listed to AOTX, APAW, NBSX, UTOU.

(*3) - complementary listed to UTOU,NBSX,UOXX

(*4) - Complementary Listed to UTOU

(a) - Model numbers may be followed by an alpha/numeric suffix for marketing purposes.

Last Updated on 2022-04-27

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2022 UL LLC."

