



NAPCO SECURITY TECHNOLOGIES, INC.
333 Bayview Avenue, Amityville, New York, U.S.A. 11701
800-645-9445 (631) 842-9400 FAX (631) 842-9137
Note: Technical Service is for alarm professionals only

NAPCO Tech Support

TECH TIP




Date: Thursday, May 02, 2024
Subject: Setting Up Super Dual™ Supervised Dual Path, Dual Carrier Reporting
Models: SLE-MAX2 Fire Communicators

1. Register the SLE-MAX2 series Fire communicator at the ComNet website (www.NapcoComNet.com) and select a **Super Dual** plan.
 - To comply with NFPA versions 2013 through 2022, select the **Super Dual** plan with 6 Hour Supervision:



- To comply with NFPA version 2010, select the **Super Dual** plan with 24 Hour Supervision:

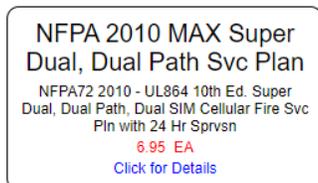


Note: To enable Dual Sim Supervision in the NAPCO NOC (www.NapcoNoc.com), the firmware must be version **226.151.30 / 0.6** or higher. Go to the **Check-ins** tab > **Firmware Upgrade** to update the communicator firmware, if needed. See the following Video Tech Tip for instructions: https://tech.napcosecurity.com/index.php/techlibrary/docdetails/brand_id/1/doc_id/3250




NAPCO SECURITY TECHNOLOGIES, INC.
333 Bayview Avenue, Amityville, New York, U.S.A. 11701
800-645-9445 (631) 842-9400 FAX (631) 842-9137
Note: Technical Service is for alarm professionals only

2. Power the communicator. Go to **Check-ins > Dual SIM Signal**:

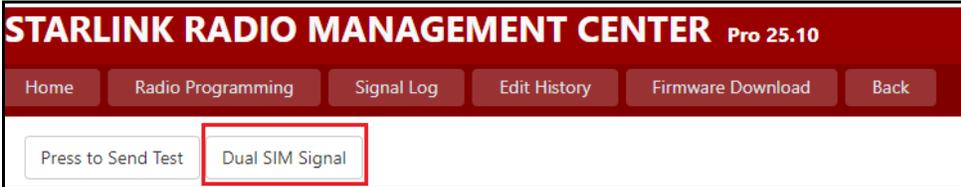

3. Enable **Dual SIM Supervision** and set the **Scan Periodicity** to **6 Hours**, then select **Save Settings**.

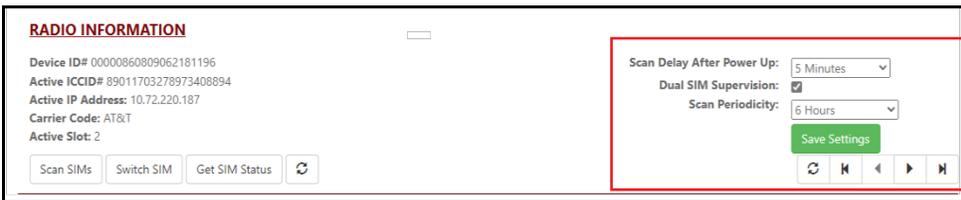

Note: All other programming is identical to other StarLink Sole/Dual path communicator models.