



**NAPCO SECURITY TECHNOLOGIES, INC.**  
333 Bayview Avenue, Amityville, New York, U.S.A. 11701  
800-645-9445 (631) 842-9400 FAX (631) 842-9137  
*Note: Technical Service is for alarm professionals only*

# NAPCO Tech Support

## TECH TIP




**Date:** Tuesday, July 30, 2024

**Subject:** How to Configure your Prima Super Panel for Auto Arming and Auto Disarming


**Models:** Prima

Configure your Prima Super Panel for Auto Arming and Auto Disarming as follows:

1. Select the **Settings** menu ("hamburger" icon) at the top left:

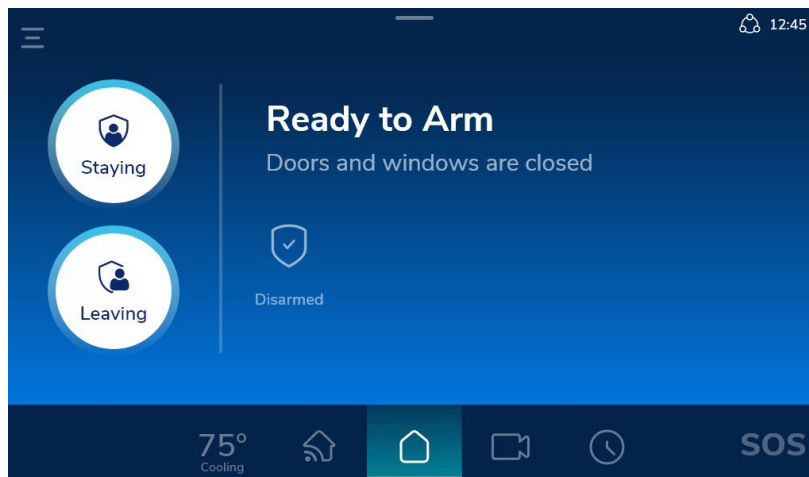


2. Enter your Master passcode:

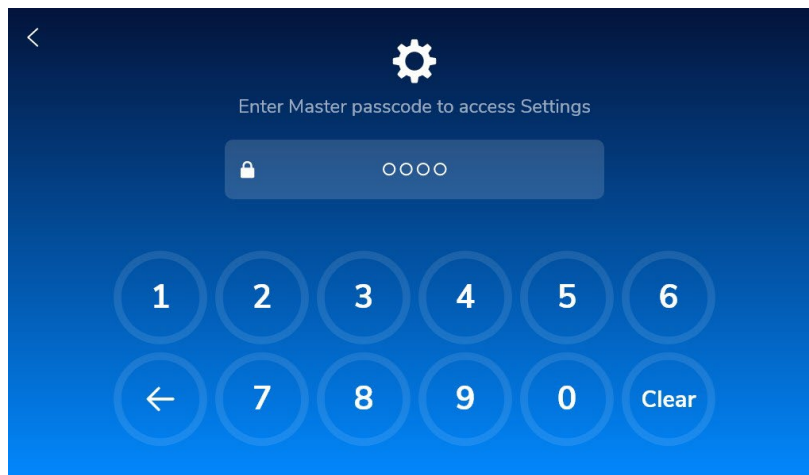




**NAPCO SECURITY TECHNOLOGIES, INC.**  
333 Bayview Avenue, Amityville, New York, U.S.A. 11701  
800-645-9445 (631) 842-9400 FAX (631) 842-9137  
*Note: Technical Service is for alarm professionals only*


3. In **Settings**, select **Auto Arming**:

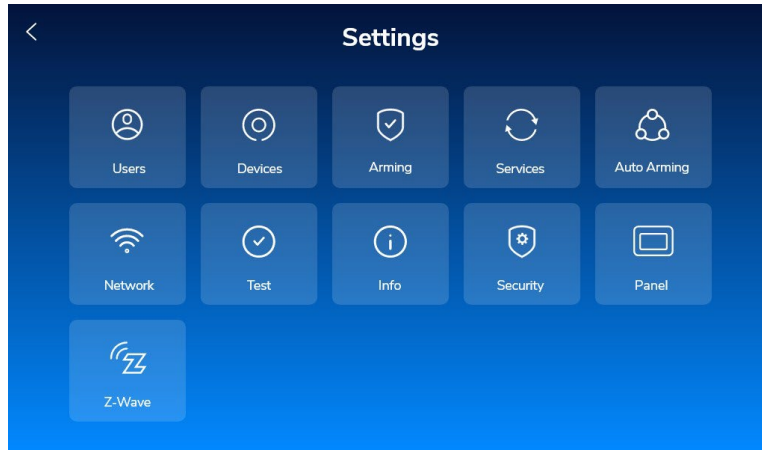

4. Select **Add New**:

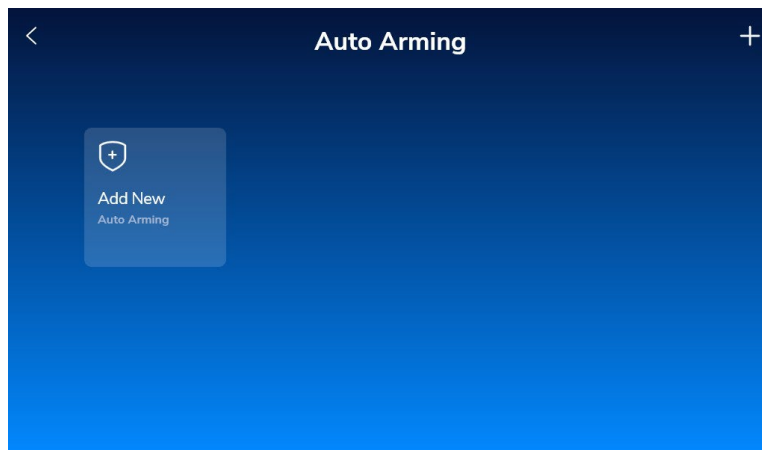


5. Type a name for the Auto Arming / Disarming schedule, then select the 'checkmark' icon:

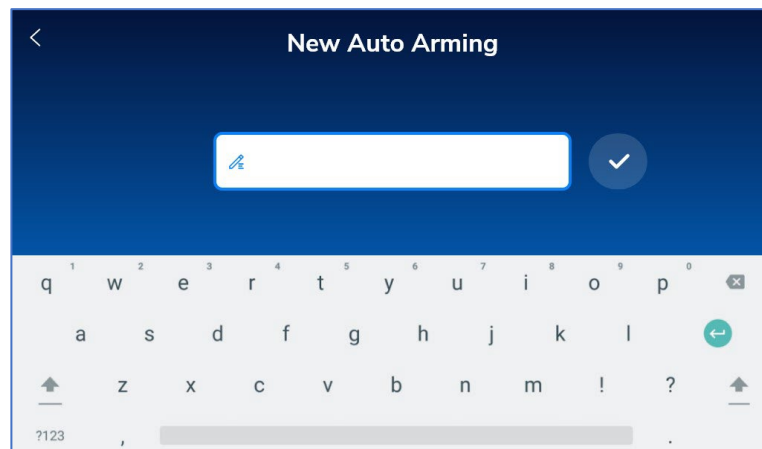




**NAPCO SECURITY TECHNOLOGIES, INC.**  
333 Bayview Avenue, Amityville, New York, U.S.A. 11701  
800-645-9445 (631) 842-9400 FAX (631) 842-9137  
*Note: Technical Service is for alarm professionals only*


6. Select the **Arming Mode** of the schedule, then select **Next**:

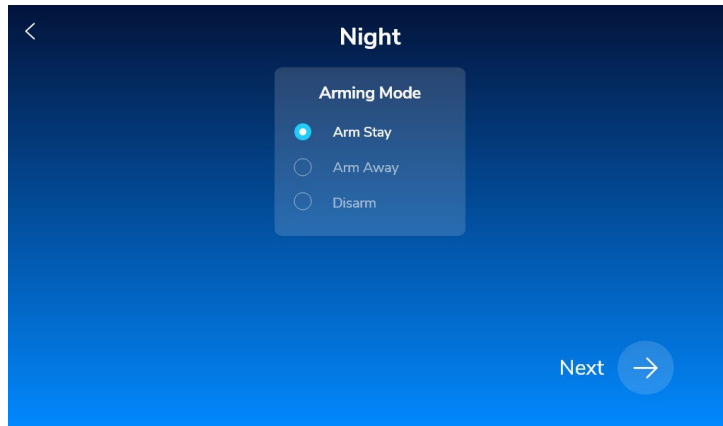

7. Select the day(s) of the week for the schedule to run (multiple days can be selected), then select **Next**:

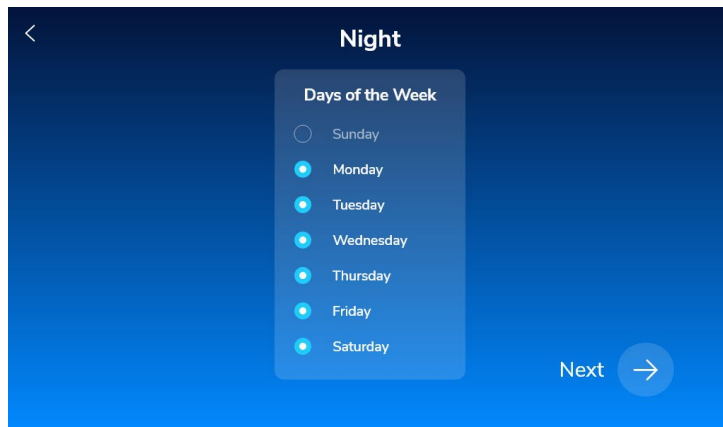

8. Select the time for the schedule to run, then select **Next**:

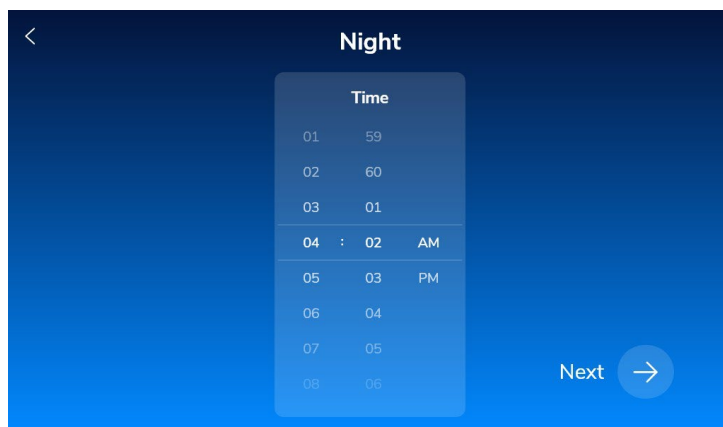

Your schedule is now saved. If you wish, you can go back and make multiple arming/disarming schedules as needed.